

INSTRUCTIONS: REVOLUTION 32 CABINET™



Congratulations on your purchase.

Follow these instructions for easy and fast set-up of your Revolution 32 Cabinet.

For video instructions, go to <https://vimeo.com/235852489>



Warranty:

PC Locs/LocknCharge warrants the product to be free of defects in design, materials, assembly and craftsmanship from the date of purchase to the original retail purchaser. Evidence of original purchase will be required to obtain warranty service.

In the event that a defect, malfunction or failure occurs or is discovered during the warranty period, PC Locs/LocknCharge will repair or replace, at its option, the products which in the reasonable judgment of PC Locs/LocknCharge are deemed defective. All transportation costs shall be borne by the owner and the risk of loss shall be upon the party initiating the transportation.

The warranty does not apply to any product that has been subject to misuse, tampering, neglect, or accident or as a result of unauthorized alterations or repairs to the product. The warranty is in lieu of all warranties expressed or implied, including the implied warranties of merchantability and fitness for a particular purpose which are expressly excluded or disclaimed. In no event will PC Locs/LocknCharge, their directors, officers, employees, or agents be liable for any harm, consequential, incidental, third party, special or indirect damages whatsoever arising out of the use or inability to use the products even if PC Locs/LocknCharge has been advised of the possibility of such damages.

PC Locs/LocknCharge obligation is strictly and exclusively limited to the replacement or repair of any defective products. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Disclaimer:

This information is the intellectual property of IWS Global Pty Ltd and may not be distributed, duplicated or copied in part or full without the written permission. Since the use of this information, the equipment connected and the conditions by which any IWS Global product is used is beyond the control of IWS Global, it is the obligation of the owner and/or user to determine the correct and safe use of any equipment and product. To the extent that the law permits, any liability which may be incurred as a result of the use or future use of a product manufactured or sold by IWS Global is limited to the cost of repairing or replacing the failed product or component at the discretion of IWS Global either within, or outside of warranty periods, and does not extend to any loss or damage which may be caused as a consequence of misuse or failure of the equipment or product or the information contained herein. IWS Global shall not in any event be liable for economic loss of profits, indirect, special, bodily injuries or consequential damages.

Specifications and images are for illustration purposes only. Final product may differ and is subject to change without notice.


PC Locs, LocknCharge and the Padlock device are Trademarks of IWS Global Pty Ltd.
Copyright IWS Global Pty Ltd, May 2018.

Parts Box for the Revolution 32 Cabinet


Quantity	Item	Image
2	Instructional booklet	
1	Numbered stickers sheet (1 – 32)	
4	Cabinet feet	
1	3m Extension Power cord <i>(UK version image for illustration only)</i>	
2	Wall Bracket and fixings (Dynabolts and Philips head screws)	
1	Padlock	
1	ECO Safe Charge remote	
4	Padlock keys	
2	Cam lock keys (for locking the power management)	
1	Key ring	

ATTACH THE FEET

1. After unboxing gently lay the cabinet on its back using a piece of packing foam for protection. Attach the four feet.

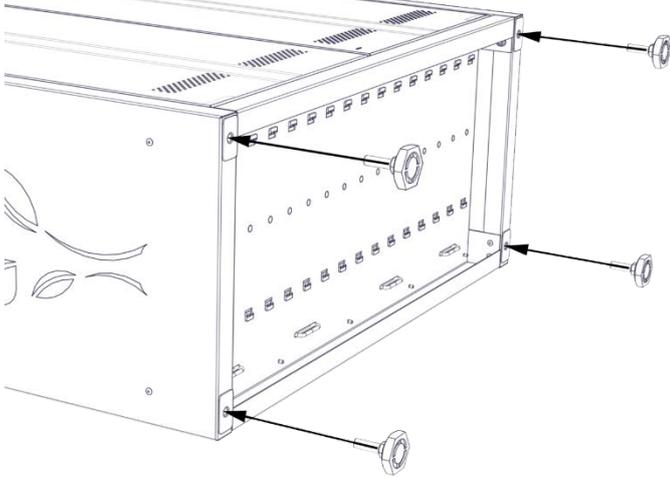


2. Adjust one foot at a time by turning to ensure Cabinet is level.

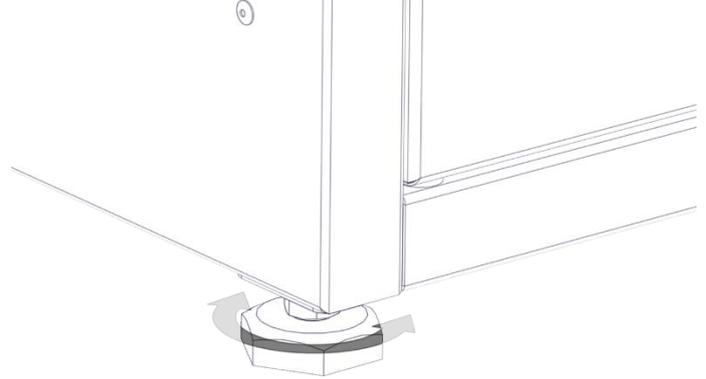


THE CABINET MUST BE SECURED TO A WALL BEFORE USE.

3. Manoeuvre the Cabinet to the location (against the wall) you wish to install it. Open the top charging compartment and with a pencil, mark where to drill the holes for attaching the wall bracket.

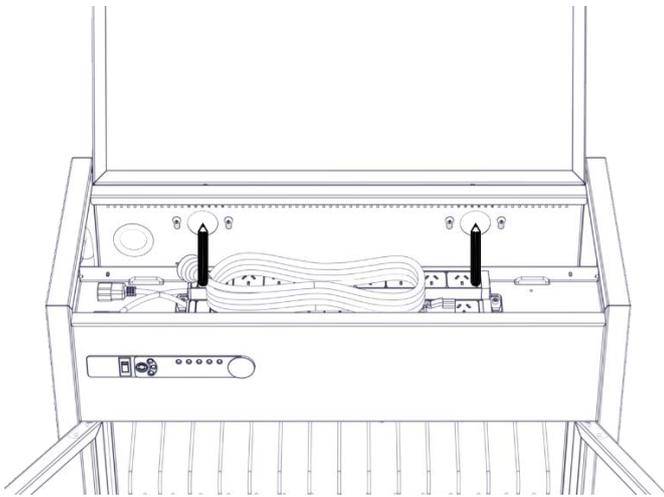


4. Drill the holes in the wall (on the marks made in previous step). Use a 10mm masonry drill the holes.

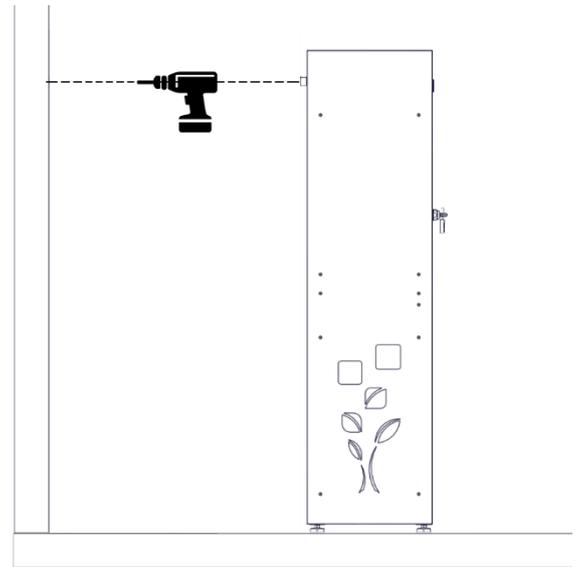


5. Attach the brackets to the wall with the dynabolts supplied. Insert wall anchors and securely tighten




6. Rout the power cable through the rear of the Cabinet ready for connecting to a power socket

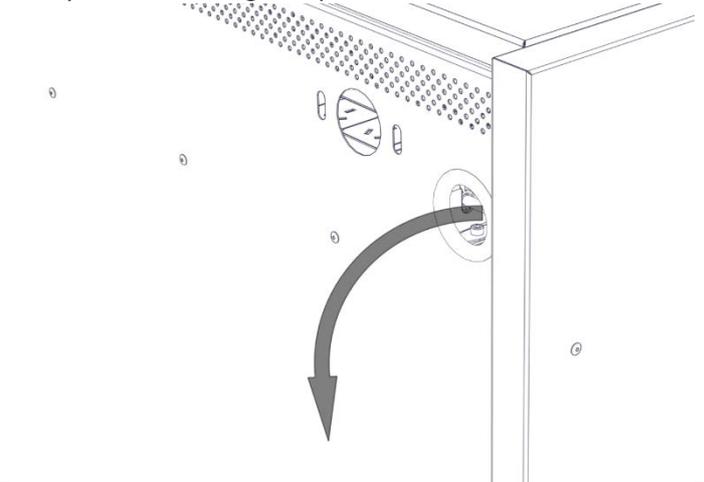

7. Manoeuvre the Cabinet against the wall where you attached the wall brackets. Secure with Philips screws

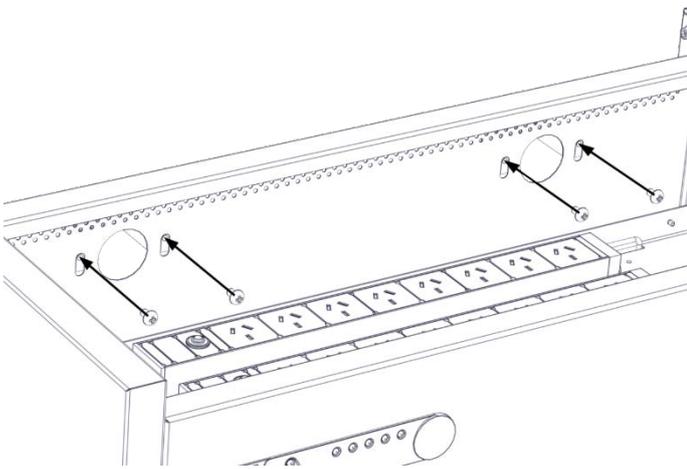


8. Wall fixing complete

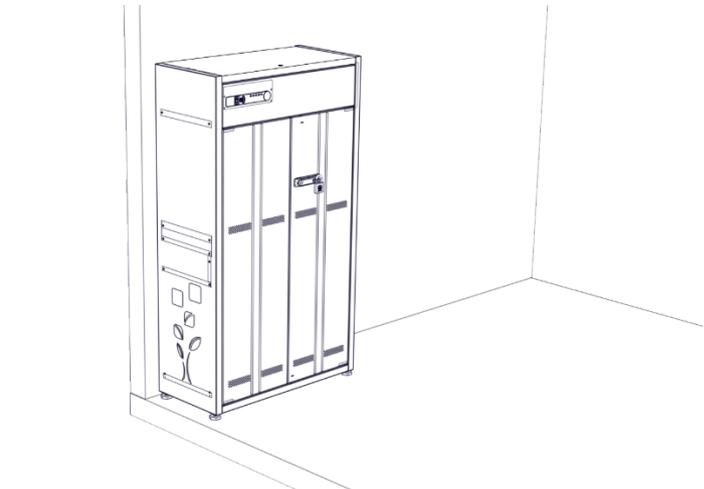


INSTALLING DEVICES


9. Use the key to unlock the top power management compartment. Note: the PDU's are mounted to a 'floating' rail, allowing it to be adjusted so that power bricks can be neatly arranged.

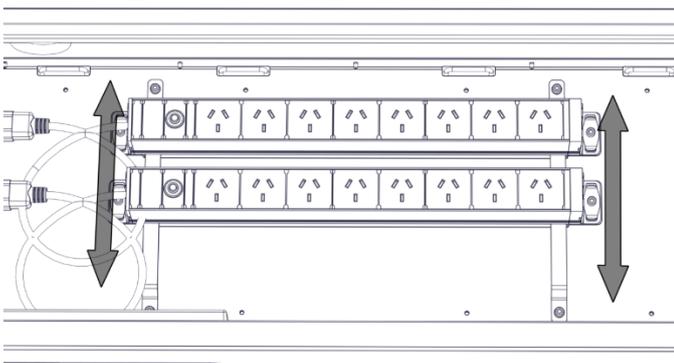


10. Connect your power adaptors then rout cables through grommeted holes – adjust length to suit devices. Use Velcro cable ties to tidy cables

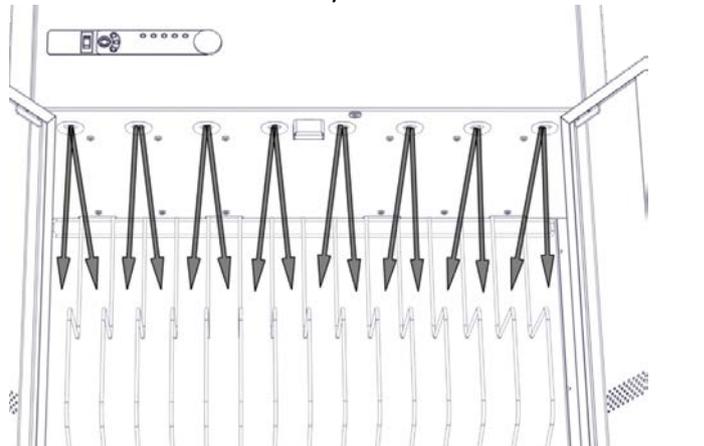


11. Open the Cabinet doors and remove the top divider

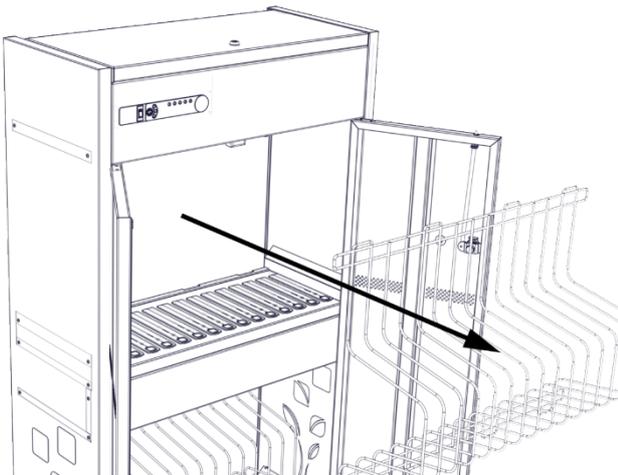


12. Lift the lid to the 2nd power management compartment. Attach the power adaptors as you did in the top compartment and rout cables.

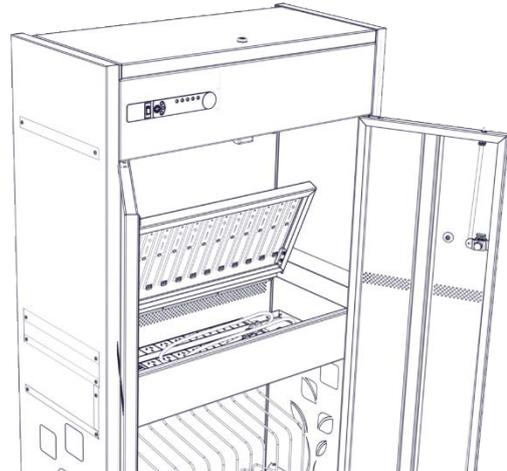


13. Optional: Apply the numbered stickers to each slot

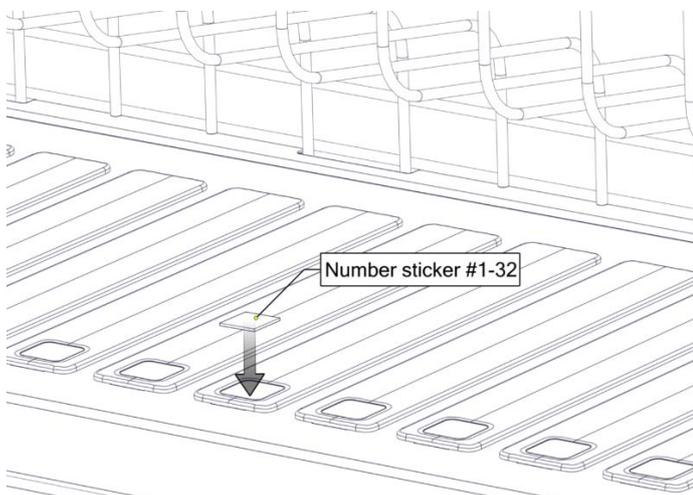

14. Replace the divider. Insert your devices and connect the power plug to each device

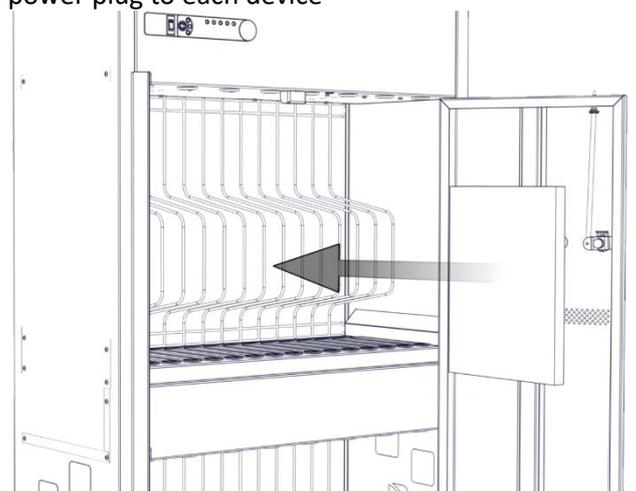

15. Connect the power cord into a wall socket to switch on. Charging commences immediately if the ECO Safe Charger is set to 'SAFE ON'. Use the remote control supplied, or the green button on the Cabinet to control the charging mode. (see ECO Safe Charge instructions for more information).

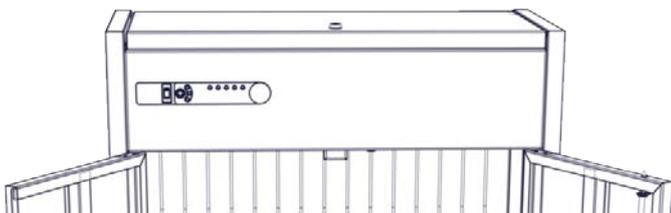

16. Close the doors and secure with the padlock

